

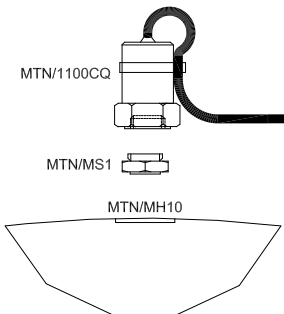
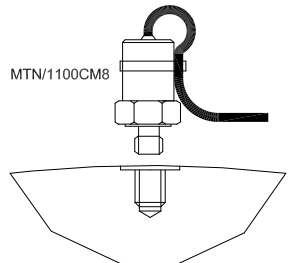


USE QUICKFIT THREADED STUDS WHERE THE BEARING HOUSING CAN BE DRILLED & TAPPED, GIVING BETTER FREQUENCY RESPONSE. QUICKFIT HALF TURN THREAD ALLOWS DISCONNECTION OF THE ACCELEROMETER WITHOUT UNCLIPPING THE CABLE.

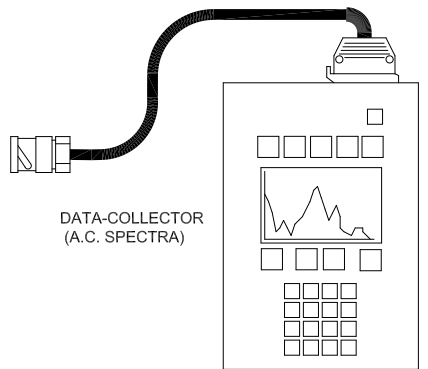

USE QUICKFIT GLUE STUDS WHERE THE BEARING HOUSING CANNOT BE DRILLED & TAPPED. QUICKFIT HALF TURN THREAD ALLOWS DISCONNECTION OF THE ACCELEROMETER WITHOUT UNCLIPPING THE CABLE.

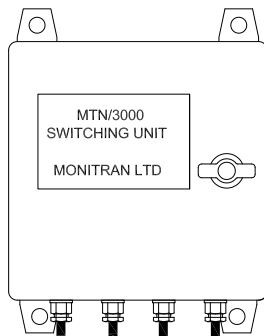

USE ACCELEROMETERS WITH INTEGRAL STUDS WHERE A GOOD BEST FREQUENCY RESPONSE IS REQUIRED. CABLE MUST BE UNCLIPPED TO DISCONNECT THE ACCELEROMETER.

Vibration Data Collection with FFT Analyser and 3000 Series Switch Box